



## EuroChef USA

41 Mercedes Way, Suite 25 Edgewood, NY 11717

www.eurochefusa.com

ph.: 631-254-3434 fax: 631-254-3426

# Easy 3- Step Quick Guide to Setup Your Verona Appliance for LP (Liquid Propane)



This Guide provides supplemental information that does not replace or supersede the original installation manual.

## **LP Orifice Kit**



Every product comes packaged with an LP conversion kit from the factory. Before starting, please locate your LP conversion kit and set aside for *Step Two*.

#### Tools Required:

- 7mm Wrench
- 7mm Socket with Extension or 7in Deep Wall socket
- One of the following: Channel Lock, Vice Grip, or Pipe Wrench
- Long Thin Flat-Head Screwdriver


#### **Step One**

## **Regulator Setup**

With channel locks, grip and turn counterclockwise to remove the regulator cap.



Gently unscrew the gas regulation screw. Once removed, flip and screw in as shown below.

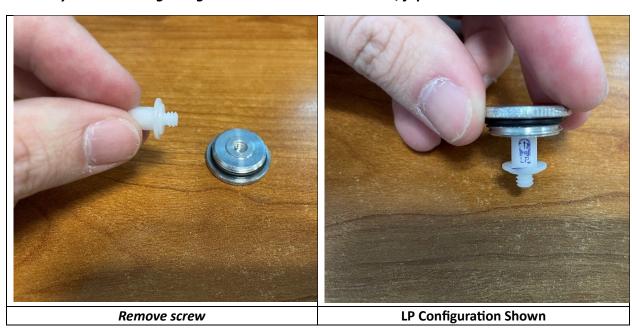

Your Pressure Regulator is now set up for LP, continue to Step Two.


**Step Two** 

## **Orifice Swap**

Included in your orifice kit are several different size orifices. You can identify the orifice size by reading the small imprint. (typically, on the top)




It is now time to swap orifices from each burner. Remove burner grates, caps, and heads.

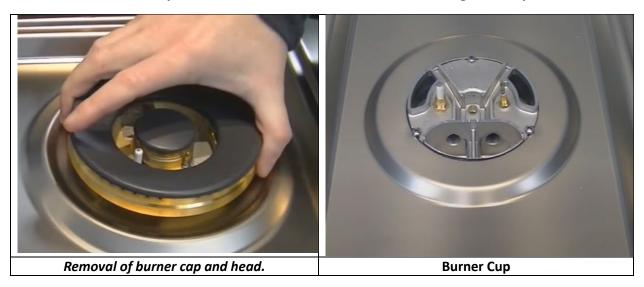


Use a 7mm wrench or socket to remove <u>All</u> Orifices. Replace with orifices from LP conversion kit. *Each burner will have one to three orifices depending on the burner type.* Repeat the process for each burner.

(Reference "Injectors table" found in your user install manual for correct orifice sizes.)

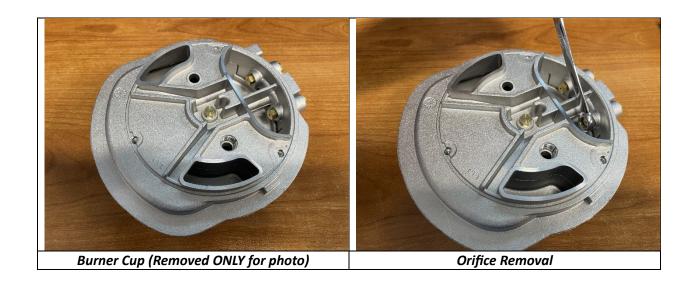


#### **Bake and Broil Orifices**

Inside the oven are two more orifices to change; one for bake, and one for broil. The oven burner must be removed to access them. Gently remove the thermocouple and the ignition electrode from the burner. Be careful not to cause damage.

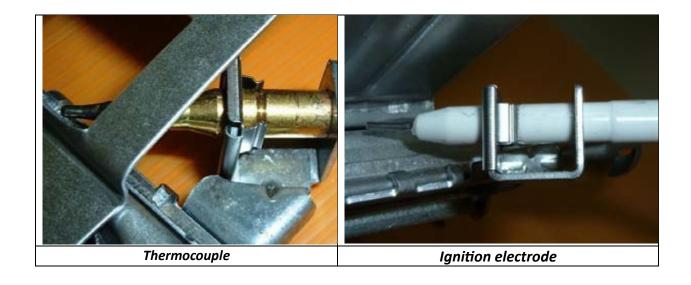

Unscrew and remove the burner mounting screw and remove burner from unit exposing the orifice.

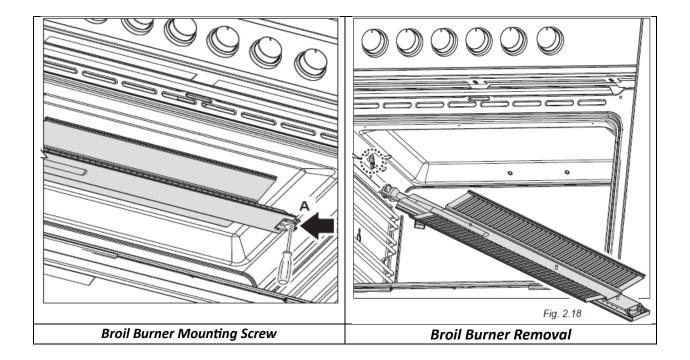


Using a 7 mm wrench or socket, remove the injector and replace it with orifice from conversion kit.

(Reference "Injectors table" found in your user install manual for correct orifice sizes.)

Install burner and the other components repeating the above steps in reverse order. Pay special attention when replacing the thermocouple and ignition electrode.


**Repeat process For Bake Burner** 

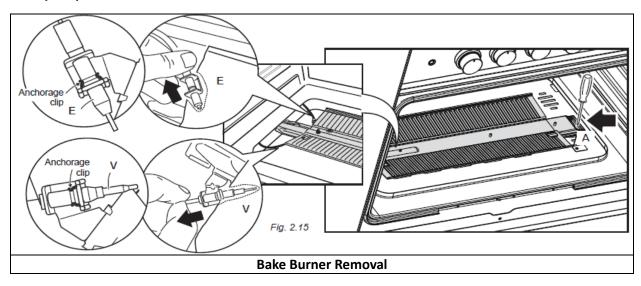

**Step Three.** 


## **Bypass Valve Configuration**

Remove knobs and locate gas regulation screws.

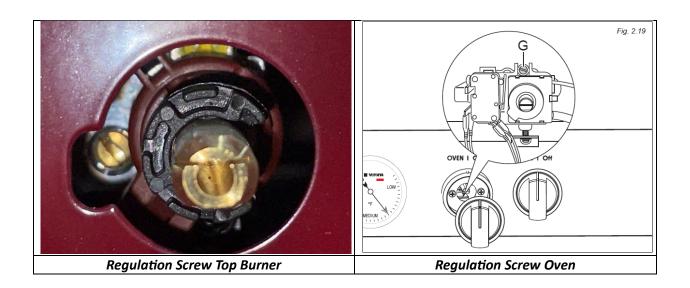

#### Turn clockwise to close the regulation screws completely.



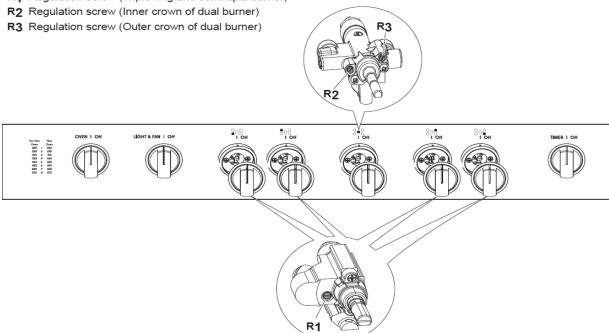

Your Verona LP conversion is complete. If You have any questions or concerns, please contact the service department at 866-844-6566